

OPERATION MANUAL

airHome 300

ROOM AIR CONDITIONER


SPLIT TYPE
CH SERIES



MODELS


RAK-CH18PCAST/RAC-CH18PCAST
RAK-CH24PCAST/RAC-CH24PCAST

HITACHI

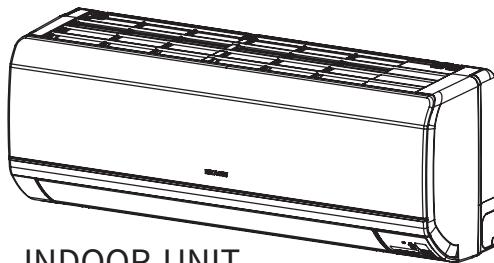


INDOOR UNIT

RAK-CH18PCAST
RAK-CH24PCAST

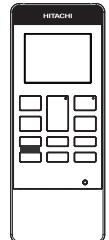


RAR-M0A6

OUTDOOR UNIT

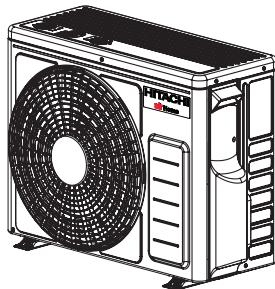

RAC-CH18PCAST

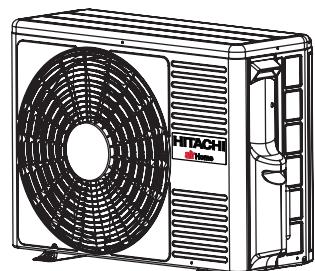

RAC-CH24PCAST

Access the full version
of the User Operation Manual by
scanning the code.



[https://docs.hitachiaircon.com/
RAK-CH-PCAST-RAC-CH-PCAST](https://docs.hitachiaircon.com/RAK-CH-PCAST-RAC-CH-PCAST)

EN INSTRUCTION MANUAL

TH ក្រប់ការប្រើបង្ហាញ

Cooling & Heating



SAFETY PRECAUTION

- Please read the "Safety Precaution" carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of "⚠ Warning" and "⚠ Caution". The "Warning" section contains matters which, if not observed strictly, may cause death or serious injury. The "Caution" section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The sign indicate the following meanings.

	Make sure to connect earth line.		The sign in the figure indicates prohibition.
	Indicates the instructions that must be followed.		

- Please keep this manual after reading.

EXPLANATION OF SYMBOLS DISPLAYED ON UNIT					
	W A R N I N G	This symbol shows that this equipment uses a flammable refrigerant. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.		C A U T I O N	This symbol shows that a service personnel should be handling this equipment with reference to the Installation Manual.
	C A U T I O N	This symbol shows that the Operation Instructions should be read carefully.		C A U T I O N	This symbol shows that there is information included in the Operation Manual and/or Installation Manual

PRECAUTIONS DURING INSTALLATION

W A R N I N G	<ul style="list-style-type: none"> Do not reconstruct the unit. Water leakage, fault, short circuit or fire may occur if you reconstruct the unit by yourself.
	<ul style="list-style-type: none"> Please ask your sales agent or qualified technician for the installation of your unit. Water leakage, short circuit or fire may occur if you install the unit by yourself.
	<ul style="list-style-type: none"> Please use earth line. Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock. Be sure to use the specified piping set for R32. Otherwise, this may result in broken copper pipes or faults.

C A U T I O N	<ul style="list-style-type: none"> A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists. Do not install the unit near a location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it. Please ensure smooth flow of water when installing the drain hose.
--	--

PRECAUTIONS DURING SHIFTING OR MAINTENANCE

W A R N I N G	<ul style="list-style-type: none"> Should abnormal situation arises (like burning smell), please stop operating the unit and turn off the circuit breaker. Contact your agent. Fault, short circuit or fire may occur if you continue to operate the unit under abnormal situation.
	<ul style="list-style-type: none"> Please contact your agent for maintenance. Improper self maintenance may cause electric shock and fire.
	<ul style="list-style-type: none"> Please contact your agent if you need to remove and reinstall the unit. Electric shock or fire may occur if you remove and reinstall the unit yourself improperly.
	<ul style="list-style-type: none"> If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service/parts centers.
	<ul style="list-style-type: none"> If the air conditioner is not cool, one possible cause could be due to refrigerant leakage, so consult your dealer. The refrigerant gas used in the air conditioner is harmless. But if refrigerant gas leaks into the room, harmful products are generated when in contact with fire from appliances such as a stove heater. When there is refrigerant gas accumulation in the room, immediately stop the air conditioner. Open the windows for ventilation and contact your agent.

PRECAUTIONS DURING OPERATION

W A R N I N G	<ul style="list-style-type: none"> Avoid an extended period of direct air flow for your health.
	<ul style="list-style-type: none"> Do not insert a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury. Before cleaning, be sure to stop the operation and turn the breaker OFF.
	<ul style="list-style-type: none"> Do not use any conductor as fuse wire, this could cause fatal accident.

PRECAUTIONS DURING OPERATION

- The product shall be operated under the manufacturer specification and not for any other intended use.



- Do not attempt to operate the unit with wet hands, this could cause fatal accident.

- During thunder storm, disconnect and turn off the circuit breaker.



- Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc.

- Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger.



- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.

- Do not use any aerosol or hair sprays near the indoor unit. This chemical can adhere on heat exchanger fin and blocked the evaporation water flow to drain pan. The water will drop on tangential fan and cause water splashing out from indoor unit.




- Please switch off the unit and turn off the circuit breaker during cleaning, the high-speed fan inside the unit may cause danger.

- Turn off the circuit breaker if the unit is not to be operated for a long period.



- Do not climb on the outdoor unit or put objects on it.

- Do not put water container (like vase) on the indoor unit to avoid water dripping into the unit. Dripping water will damage the insulator inside the unit and causes short-circuit.

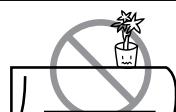


- Do not place plants directly under the air flow as it is bad for the plants.

- When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drips down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time.
- If the amount of heat in the room is above the cooling or heating capability of the unit (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

- This appliance is not intended for use by persons (including children) who are physically handicapped sensory or mental or lack of experience and knowledge. Unless supervised or instructed on the use of electrical appliances by persons responsible for their safety.

NAMES AND FUNCTIONS OF EACH PART

INDOOR UNIT

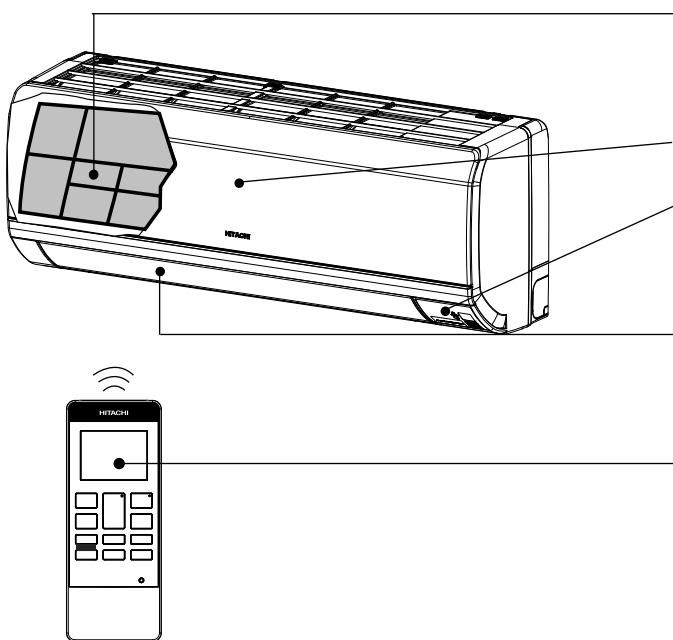

Pre-filter

To prevent dust from coming into the indoor unit.
(Refer page 9)

Front panel

Indoor unit indicators


Light indicator showing the operating condition.
(Refer page 5)

Horizontal deflector • Vertical deflector (Air Outlet)

Remote controller

Send out operation signal to the indoor unit. So as to operate the whole unit.

OUTDOOR UNIT

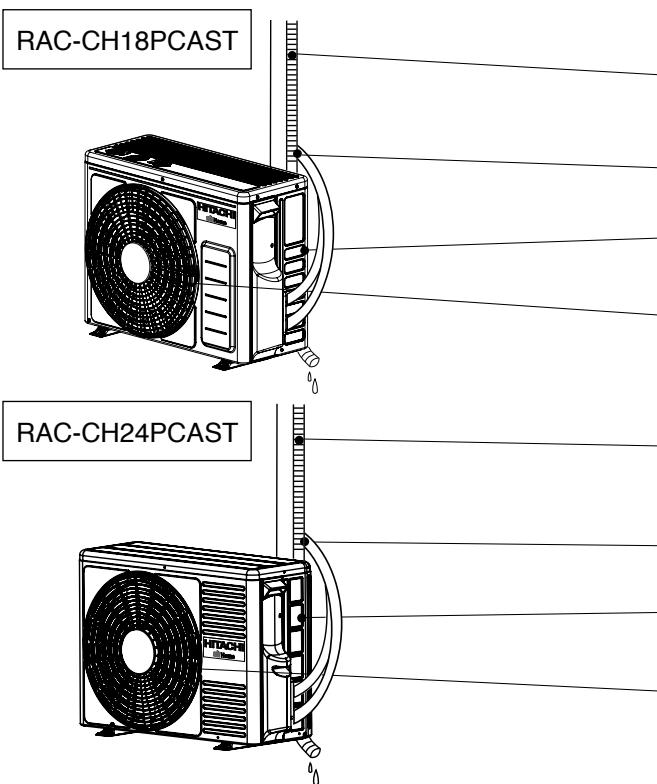

Drain pipe

Condensed water drain to outside.

Connecting cord and insulation pipe for piping

Air inlet (Back, Left side)

Air outlet

Drain pipe

Condensed water drain to outside.

Connecting cord and insulation pipe for piping

Air inlet (Back, Left side)

Air outlet

MODEL NAME AND DIMENSIONS

MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAK-CH18PCAST, RAK-CH24PCAST	900	300	230
RAC-CH18PCAST	658	530	275
RAC-CH24PCAST	750	570	288

INDOOR UNIT INDICATORS

FROST WASH LAMP

This lamp lights when the Frost Wash function is in operation.


This lamp blinks to suggest operating manual FROST WASH operation after 200 hours of air conditioner cumulative usage. Please refer to remote controller manual for the details of Frost Wash operation.

OPERATION LAMP

This lamp lights during operation.

TIMER LAMP

This lamp lights when the timer is working.

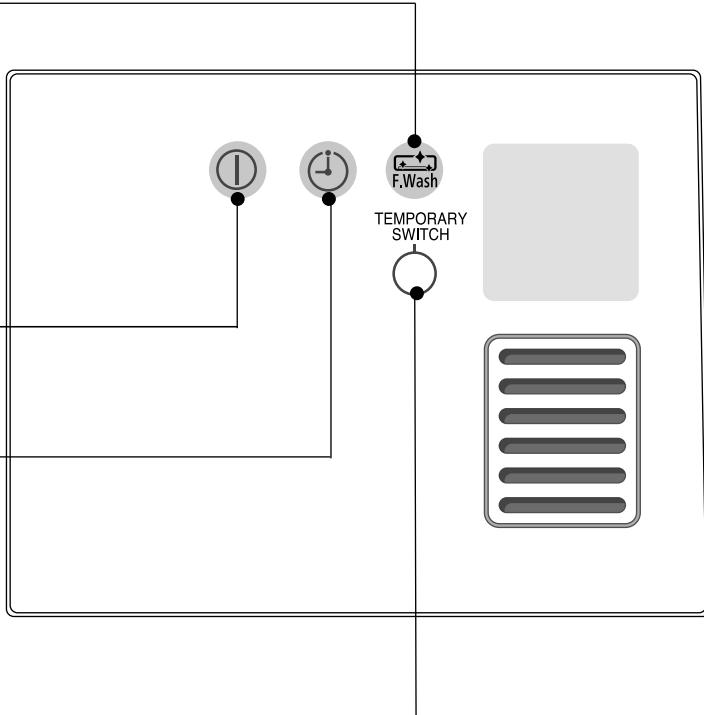

TEMPORARY SWITCH button

TEMPORARY SWITCH

Use this switch to start and stop when the remote controller does not work.


- By pressing the temporary switch, the operation is done in automatic mode.
- When the operation is done using the temporary switch after the power source is turned off and turn on again, the operation is done in automatic mode.

NAMES AND FUNCTIONS OF REMOTE CONTROL UNIT

REMOTE CONTROLLER

This controls the operation of the indoor unit. Signal range to reach indoor unit is about 7 meters. If inverter lamp is used, the range of control may be shorter.

This unit can be fixed on a wall using the fixture provided. Before fixing it, make sure the indoor unit can be controlled from the remote controller.

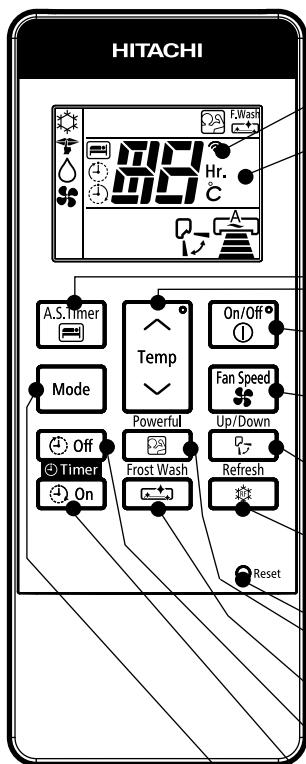

On/Off ①	START/STOP
Mode	MODE SELECT
COOLING SILENT DEHUMIDIFY FAN	
Fan Speed 风扇	FAN SPEED
AUTO SILENT LOW MEDIUM HIGH	
Powerful 强力	ONE TOUCH POWERFUL
Up/Down ↑↓	AUTO SWING (HORIZONTAL)
Off Timer On	TIMER SELECTOR OFF TIMER ON TIMER
A.S.Timer 定时器	AIR SLEEP TIMER
Frost Wash 除霜	FROST WASH
Refresh 刷新	REFRESH

Transmission sign

The transmission sign blinks when a signal is sent.

Display

This indicates the room temperature selected, timer status, function and intensity of circulation selected.

AIR SLEEP TIMER button

Use this button to set the air sleep timer mode.

TEMPERATURE button

Use this button to raise or lower the temperature setting. (Keep pressed, and the value will change more quickly.)

START/STOP button

Press this button to start or to stop operation.

FAN SPEED selector button

This determines the fan speed. Each time you press this button, the intensity of circulation will change from (AUTO) → (HI) → (MED) → (LOW) → (SILENT).

AUTO SWING button

Controls the angle of the horizontal air deflector.

REFRESH button

Use this button to refresh the room condition.

RESET button

ONE TOUCH POWERFUL button

Use this button to deliver faster and more comfortable air-conditioning or start operation.

FROST WASH button

During OFF mode, press this button to set the Frost Wash operation.

OFF-TIMER button

Select to turn OFF time.

ON-TIMER button

Select to turn ON time.

MODE selector button

Use this button to select MODE. Each time you press this button the MODE selection will change from (COOLING) → (SILENT) → (DEHUMIDIFY) → (FAN). However, during OFF mode SILENT will be skipped.

Precautions for Use

- Do not put the remote controller in the following places.
 - In direct sunlight.
 - In the vicinity of a heater.
- Handle the remote controller carefully. Do not drop it on the floor, and protect it from water.
- Once the outdoor unit stops, it will not restart for about 3 minutes (unless you turn the power switch off and on or unplug the power cord and plug it in again). This is to protect the device and does not indicate a failure.

THE IDEAL WAYS OF OPERATION

Suitable Room Temperature



⚠ Warning

Freezing temperature is bad for health and a waste of electric power.

Ventilation



⚠ Caution


Do not close the room for a long period of time. Occasionally open the door and windows to allow the entrance of fresh air.

Effective Usage Of Timer

At night, please use the "OFF or ON timer or SLEEP timer operation mode", together with your wake up time in the morning. This will enable you to enjoy a comfortable room temperature. Please use the timer effectively.



Install curtain or blinds

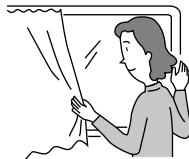

It is possible to reduce heat entering the room through windows.

Do Not Forget To Clean The Pre-Filter



Dusty air filter will reduce the air volume and the cooling efficiency. To prevent from wasting electric energy, please clean the filter every 2 weeks.

Please Adjust Suitable Temperature For Baby And Children




Please pay attention to the room temperature and air flow direction when operating the unit for baby, children and old folks who have difficulty in movement.

FOR USER'S INFORMATION

The Air Conditioner And The Heat Source In The Room


⚠ Caution

If the amount of heat in the room is above the cooling capability of the air conditioner (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

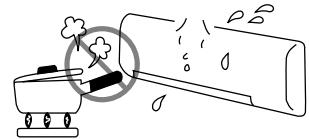

Not Operating For A Long Time


When the indoor unit is not to be used for a long period of time, please switch off the power from the mains. If the power from mains remains "ON", the indoor unit still consumes about 2.5W in the operation control circuit even if it is in "OFF" mode.

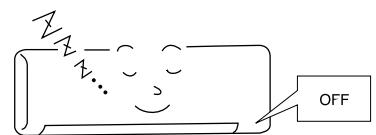

When Lightning Occurs

⚠ Warning


To protect the whole unit during lightning, please stop operating the unit and remove the plug from the socket.

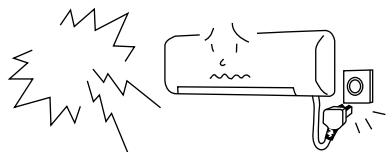

Interference From Electrical Products

⚠ Caution

To avoid noise interference, please place the indoor unit and its remote controller at least 1m away from electrical products.

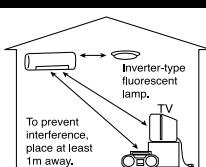


ATTACHING THE AIR PURIFYING FILTERS

⚠ CAUTION

Before cleaning, stop operation and switch off the power supply.


1 Open the front panel

- Pull up the front panel by holding it at both sides with both hands.

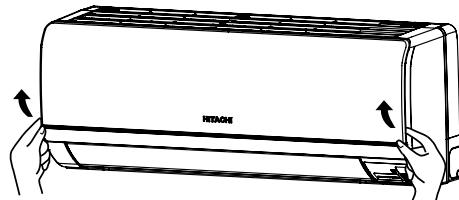



2 Remove the Pre-filter

- Push upward to release the claws and pull out the Pre-filter.

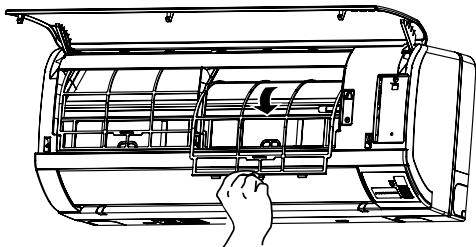

3 Attaching the air purifying filters


- Attach the air purifying filters to the frame by gently compress its both sides and release after insertion into Pre-filter frame. Honeycomb surface shall be on the front side and flat surface shall be on the back side when insert (only for the purifying filter with a flat surface).

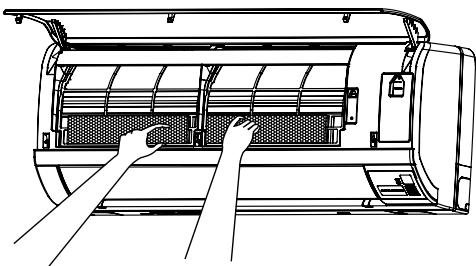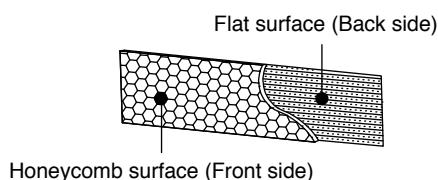

⚠ CAUTION


Do not bend the air purifying filter as it may cause damage to the structure.

Please do not smell direct from source of filter.

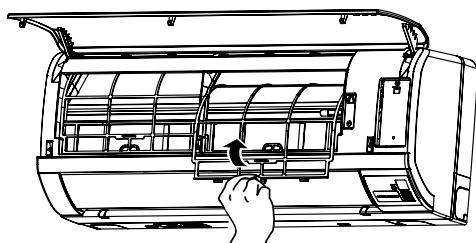

4 Attach the Pre-filters

- Attach the Pre-filters by ensuring that the surface written "FRONT" is facing front.
- After attaching the Pre-filters, push the front panel at three arrow portions as shown in figure and close it.

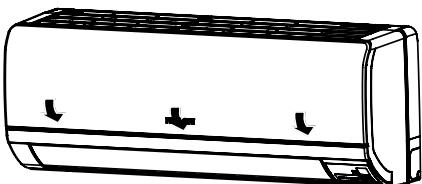

NOTE

- In case of removing the air purifying filters, please follow the above procedures.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air purifying filters are used. So, set the fan speed to "HIGH" when using it in this condition.
- Air purifying filters are not washable. It is recommended to use vacuum to clean it. It can be used for 1 year time. Type number for this air purifying filter is <SPX-CFH22PM25>. Please use this number for ordering when you want to renew it.

MAINTENANCE

⚠ CAUTION

Before cleaning, stop operation and switch off the power supply.


1. PRE-FILTER

Clean the Pre-filter, as it removes dust inside the room. In case the Pre-filter is full of dust, the air flow will decrease and the cooling capacity will be reduced. Further, noise may occur. Be sure to clean the Pre-filter following the procedure below.

PROCEDURE



1

- Open the front panel and remove the Pre-filter
- Gently lift and remove the air purifying filters from the air purifying filter frame.

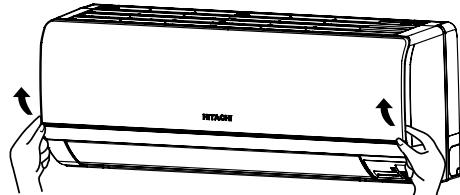


2

- Vacuum dust from the Pre-filter and air purifying filter using vacuum cleaner. If there is too much dust, wipe the filter with wet cloth or sponge. Allow filters to dry in shade.

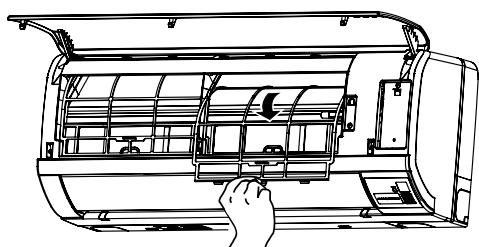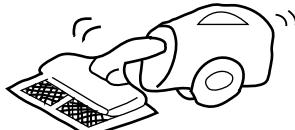

3

- Re-insert the air purifying filter to the filter frame. Set the Pre-filter with "FRONT" mark facing front, and slot them into the original state.
- After attaching the Pre-filters, push the front panel at three arrow portions as shown in figure and close it.

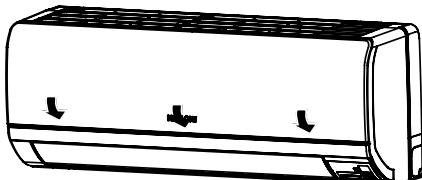

NOTE:


- Air purifying filter should be cleaned every month or sooner if noticeable loading occurs. When used overtime, it may lose its deodorizing function. For maximum performance, it is recommended to replace it every 1 year depending on application requirements.

⚠ CAUTION

- Do not operate the air conditioner without Pre-filter. Dust may enter the air conditioner and fault may occur.


2. CLEANING OF FRONT PANEL

- Remove the front panel and wash with clean water.
Wash it with a soft sponge.
After using neutral detergent, wash thoroughly with clean water.
- When front panel is not removed, wipe it with a soft dry cloth.
Wipe the remote controller thoroughly with a soft dry cloth.
- Wipe the water thoroughly.
If water remains at indicators or signal receiver of indoor unit, it causes trouble.

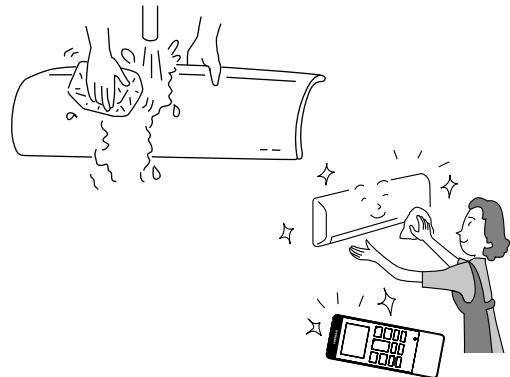


Method of removing the front panel.
Be sure to hold the front panel with both hands to detach and attach it.

Removing the Front Panel

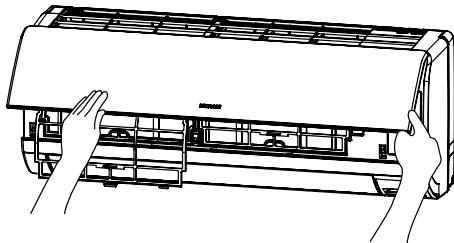

Attaching the Front Panel

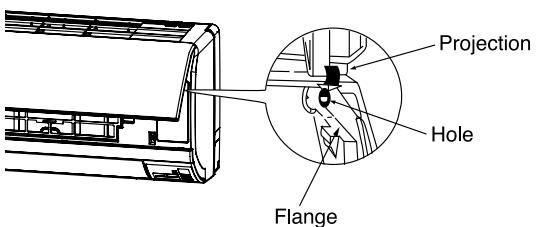

- When the front panel is fully opened with both hands, push the right arm to the inside to release it, and while closing the front panel slightly, pull it out forward.

- Move the projections of the left and right arms into the Flanges in the unit and securely insert them into the holes.

CAUTION

- Never use hot water (above 40°C), benzine, gasoline, acid, thinner or a brush, because they will damage the plastic surface and the coating.



WIRING ARRANGEMENT

CAUTION

- Please use earth line.
Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock
- A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists.



IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow	:	Earth
Blue	:	Neutral
Brown	:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol \textcircled{L} or coloured green or green-and-yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

NOTE

If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service/parts centers.

CAUTION

Cleaning and maintenance must be carried out only by qualified service personnel. Before cleaning, stop operation and switch off the power supply.

REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS BY QUALIFIED SERVICE PERSONNEL EITHER EVERY HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT OR SERVICE SHOP.

1		Is the earth line disconnected or broken?
2		Is the mounting frame seriously affected by rust and is the outdoor unit tilted or unstable?
3		Is the plug of power line firmly plugged into the socket? (Please ensure no loose contact between them).



Notes

- In quiet or stop operation, the following phenomena may occasionally occur, but they are not abnormal for the operation.
 - (1) Slight flowing noise of refrigerant in the refrigerating cycle.
 - (2) Slight rubbing noise from the fan casing which is cooled and then gradually warmed as operation stops.
- The odor will possibly be emitted from the room air conditioner because the various odor, emitted by smoke, foodstuffs, cosmetics and so on, sticks to it. So the air filter and the evaporator regularly must be cleaned to reduce the odor.
- Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent for the model of your unit, serial number, date of installation. Please also inform him regarding the fault.
- Power supply shall be connected at the rated voltage, otherwise the unit will be broken or could not reach the specified capacity.

AFTER SALE SERVICE AND WARRANTY

WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS

CONDITION	CHECK THE FOLLOWING POINTS
When it does not operate	<ul style="list-style-type: none"> • Is the fuse all right? • Is the voltage extremely high or low? • Is the circuit breaker "ON"?
When it does not cool well	<ul style="list-style-type: none"> • Was the air filter cleaned? • Does sunlight fall directly on the outdoor unit? • Is the air flow of the outdoor unit obstructed? • Are the doors or windows opened, or is there any source of heat in the room? • Is the set temperature suitable?

Please note:

On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence. The conditions of the local Power Supply Companies are to be observed.

Note

- Avoid to use the room air conditioner for cooling operation when the outside temperature is below 21°C (70°F). The recommended maximum and minimum operating temperatures of the hot and cold sides should be as below:

		Minimum	Maximum
Indoor	Dry bulb °C	21	32
	Wet bulb °C	15	23
Outdoor	Dry bulb °C	21	46
	Wet bulb °C	15	26

คู่มือ การใช้งาน


air Home 300

เครื่องปรับอากาศสำหรับห้อง
แบบแยกส่วน
รุ่น CH




ชื่อรุ่น

RAK-CH18PCAST/RAC-CH18PCAST/
RAK-CH24PCAST/RAC-CH24PCAST

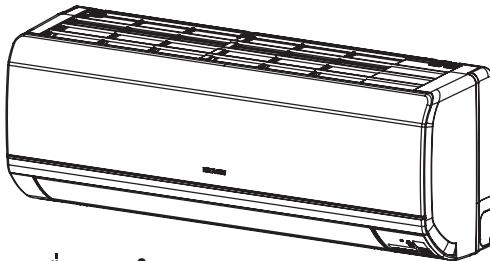


เครื่องภายใน
RAK-CH18PCAST
RAK-CH24PCAST

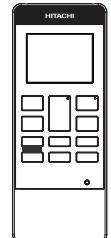


RAR-M0A6

เครื่องภายนอก

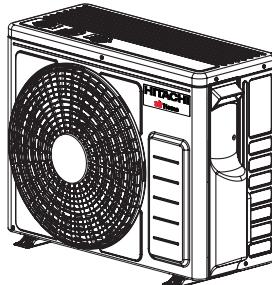

RAC-CH18PCAST

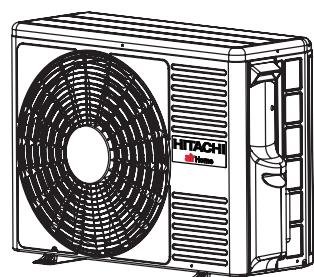

RAC-CH24PCAST

โปรดสแกนคิวอาร์โค้ดนี้ เพื่อดูคู่มือการใช้งาน
ฉบับสมบูรณ์



[https://docs.hitachiaircon.com/
RAK-CH-PCAST-RAC-CH-PCAST](https://docs.hitachiaircon.com/RAK-CH-PCAST-RAC-CH-PCAST)

EN INSTRUCTION MANUAL
TH คู่มือการใช้งาน

Cooling & Heating



ข้อควรระวังเพื่อความปลอดภัย

- โปรดอ่าน “ข้อควรระวังเพื่อความปลอดภัย” โดยละเอียดก่อนการใช้งานเครื่องปรับอากาศ เพื่อให้แน่ใจว่าใช้งานเครื่องปรับอากาศได้อย่างถูกต้อง
- โปรดใส่ใจเป็นพิเศษกับสัญลักษณ์ “▲ คำเตือน” และ “▲ ข้อควรระวัง” ส่วน “คำเตือน” ประกอบด้วยเนื้อหาการใช้งานที่หากไม่ปฏิบัติตามอย่างเคร่งครัด อาจเป็นสาเหตุให้เสียชีวิตหรือได้รับบาดเจ็บรุนแรงได้ ส่วน “ข้อควรระวัง” ประกอบด้วยเนื้อหาการใช้งานที่หากไม่ปฏิบัติตามอย่างเหมาะสม อาจมีสาเหตุให้เกิดผลร้ายแรงได้ โปรดปฏิบัติตามค่าแนะนำอย่างเคร่งครัดเพื่อความปลอดภัย
- สัญลักษณ์ด้านๆ แสดงความหมายดังนี้

	ตรวจสอบให้แน่ใจว่ามีการเขียนต่อสายดิน		สัญลักษณ์ในรูปแสดงถึงข้อห้ามด้านๆ
	แสดงถึงคำแนะนำที่ต้องปฏิบัติตาม		

- โปรดเก็บคู่มือฉบับนี้ไว้หลังจากการอ่าน

ค่าอธิบายสัญลักษณ์ที่แสดงบนอุปกรณ์					
	คำเตือน	สัญลักษณ์นี้แสดงว่าอุปกรณ์นี้ใช้สารทำความเย็นที่ติดไฟได้ หากการทำความเย็นร้าว อาจเกิดการระเบิดได้หากมีแหล่งจุดระเบิดภายนอก		ข้อควรระวัง	สัญลักษณ์นี้แสดงว่าช่างบริการควรจัดการกับอุปกรณ์โดยอ้างอิงข้อมูลในคู่มือการติดตั้ง
	ข้อควรระวัง	สัญลักษณ์นี้แสดงว่าควรอ่านคำแนะนำในการใช้งานโดยละเอียด		ข้อควรระวัง	สัญลักษณ์นี้แสดงว่ามีข้อมูลอยู่ในคู่มือการใช้งานและ/หรือคู่มือการติดตั้ง

ข้อควรระวังระหว่างทำการติดตั้ง

	<ul style="list-style-type: none"> ห้ามรื้อเครื่องปรับอากาศเพื่อประกอบใหม่ อาจทำให้เกิดน้ำร้าว การทำงานพิดพลาด ไฟฟ้าลัดวงจร หรือเพลิงไหม้ หากรื้อ เครื่องปรับอากาศเพื่อประกอบใหม่ด้วยตนเอง โปรดสอนความตัวแทนจ่ายของคุณ หรือช่างเทคนิคที่มีความชำนาญในการติดตั้งเครื่องปรับอากาศของคุณ อาจทำให้เกิดน้ำร้าวไฟฟ้าลัดวงจร หรือเพลิงไหม้ หากติดตั้งเครื่องปรับอากาศด้วยตนเอง โปรดใช้สายดิน ห้ามติดตั้งสายดินไว้ใกล้กับท่อน้ำหรือท่อแก๊ส สายล่อฟ้า หรือสายดินของโทรศัพท์ การติดตั้งสายดินที่ไม่เหมาะสมอาจทำให้เกิดไฟฟ้าช็อต โปรดใช้ชุดระบบห้องเย็น R32 มีฉันน้ำ อาจทำให้เกิดการชำรุดของท่อทองแดงหรือบีบูห่าด่างๆ 	
	<ul style="list-style-type: none"> ควรติดตั้งตัวตั้งจ่ายโดยขึ้นอยู่กับสถานที่ติดตั้งเครื่องปรับอากาศ หากไม่มีตัวตั้งจ่าย อาจเกิดอันตรายจากไฟฟ้าช็อตได้ ห้ามติดตั้งตัวเครื่องใกล้กับสถานที่ที่มีแก๊สไวไฟ ตัวเครื่องภายนอกอาคารอาจติดไฟ หากมีการรั่วของแก๊สไวไฟรอบๆ ตัวเครื่อง โปรดตรวจสอบให้แน่ใจว่ามีการระบายน้ำที่ดีเมื่อทำการติดตั้งท่อระบายน้ำ 	

ข้อควรระวังระหว่างการเปลี่ยนเครื่องนำรุงรักษา


	<ul style="list-style-type: none"> หากมีสถานการณ์ที่ไม่ปกติเกิดขึ้น (เช่น กลิ่นไหม้) โปรดหยุดการทำงานของเครื่องและปิดตัวตั้งจ่าย ติดต่อตัวแทนจ่ายที่น้ำยาของคุณ อาจทำให้เกิดการทำลายเครื่องปรับอากาศ หากไม่มีตัวตั้งจ่าย อาจเกิดอันตรายจากไฟฟ้าช็อตและเพลิงไหม้ สถานการณ์ไม่ปกติดีไป โปรดติดต่อตัวแทนจ่ายนำรุงรักษา การนำรุงรักษาด้วยตนเองที่ไม่เหมาะสม อาจทำให้เกิดไฟฟ้าช็อตและเพลิงไหม้ โปรดติดต่อตัวแทนจ่ายนำรุงรักษา หากคุณต้องการรื้อถอนหรือติดตั้งเครื่องใหม่ อาจทำให้ไฟฟ้าช็อตหรือเพลิงไหม้ หากคุณรื้อถอนและติดตั้งเครื่องใหม่ด้วยตนเองไม่เหมาะสม หากสายไฟชำรุด ต้องเปลี่ยนเป็นสายไฟพิเศษที่ได้รับจากศูนย์บริการ/อะไหล่ที่ได้รับอนุญาตเท่านั้น ถ้าเครื่องปรับอากาศไม่เย็น สาเหตุที่เป็นไปได้อาจหนึ่งคือสารทำความเย็นร้าว โปรดติดต่อตัวแทนจ่ายนำรุงรักษา หากสารทำความเย็นที่ใช้ในเครื่องปรับอากาศไม่เป็นอันตราย แต่หากสารทำความเย็นร้าวเข้ามาในห้อง จะทำให้เกิดสารที่เป็นอันตรายเมื่อสัมผัสนับไฟจากเครื่องใช้ เช่น เดแก๊ส เมื่อกาชทำความเย็นที่ใช้ในเครื่องปรับอากาศทันที เปิดหน้าต่างเพื่อรับอากาศ และติดต่อตัวแทนจ่ายนำรุงรักษาของคุณ 	
--	--	--

ข้อควรระวังในการใช้งาน

	<ul style="list-style-type: none"> เพื่อสุขภาพของคุณ ควรหลีกเลี่ยงการรับลมโดยตรงเป็นระยะเวลานาน ห้ามแหยน้ำ หอนไม้หรือตัดคุ้นๆ เช้าไปในช่องระบายน้ำของอาคารเช้า ออก เนื่องจากพัดลมจะหมุนที่รอบความเร็วสูง ซึ่งอาจก่อให้เกิดการบาดเจ็บได้ ก่อนการทำความสะอาดหรือปรับแต่งแผงกันได้ ให้แน่ใจว่าได้ปิดสวิตช์แล้ว ห้ามใช้ตัวน้ำไฟฟ้าได้ แทนสายไฟฟ้า การทำเช่นนี้อาจก่อให้เกิดอันตรายร้ายแรงถาวรสิ้นเชิงเสียชีวิต 	
--	---	--

ข้อควรระวังระหว่างการใช้งาน

- ควรใช้งานผลิตภัณฑ์ภายใต้ข้อกำหนดของผู้ผลิต และต้องไม่ใช้งานเพื่อจุดประสงค์อื่นๆ

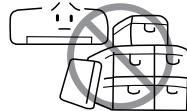

- ห้ามใช้งานเครื่องปรับอากาศขณะมือเปียก การทำเช่นนี้อาจก่อให้เกิดอุบัติเหตุร้ายแรง ถึงขั้นเสียชีวิต

- ในขณะที่มีพายฝนฟ้าคะนอง ให้ตัดการเชื่อมต่อและปิดตัวด่วน




- อย่าให้ลมเย็นที่ออกจากแผงลมเครื่องปรับอากาศหันเข้าหาอุปกรณ์ทำความร้อนในครัวเรือน เนื่องจากอาจส่งผลกระทบต่อการทำงานของอุปกรณ์นั้นๆ ได้ เช่น การต้มน้ำด้วยไฟฟ้า เตาอบ เป็นต้น

- โปรดตรวจสอบให้แน่ใจว่าโครงข่ายของขาตั้งภายนอกมีความมั่นคง "ไม่ขับขยายอ่อน แล่ไม่ชำรุด หากไม่เป็นดังนี้ ตัวเครื่องภายนอกอาคารอาจล้มและทำให้เกิดอันตรายได้"



- อย่าสอดน้ำหรือฉีดน้ำใส่ตัวเครื่องปรับอากาศโดยตรงเมื่อทำความสะอาด เนื่องจากอาจทำให้เกิดไฟฟ้าลัดวงจร


- ห้ามใช้กระป๋องน้ำดื่มหรือสเปรย์น้ำดูดลมไกล์กับตัวเครื่องปรับอากาศภายในห้องสารเคมีน้ำยาจัดติดบนพื้นแลกเปลี่ยนความร้อน และปิดกันทางระบายน้ำที่ระบายน้ำไปยังเครื่องดองน้ำทั้งน้ำจะหยดลงบนพัดลมกรงกระรอกและจะทำให้น้ำกระซึ้บออกจากเครื่องปรับอากาศภายในห้อง

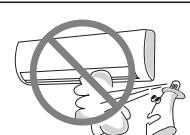


- โปรดปิดสวิตช์ตัวเครื่องและปิดตัวด่วนระหว่างการทำความสะอาด พัดลมความเร็วสูงภายในตัวเครื่องอาจทำให้เกิดอันตรายได้




- ปิดตัวด่วน หากไม่มีการใช้งานเครื่องปรับอากาศเป็นระยะเวลานาน

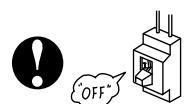


- ห้ามปืนตัวเครื่องภายนอกอาคาร หรือวางสิ่งของไว้ด้านบนตัวเครื่อง

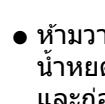

- ห้ามวางภาชนะใส่น้ำ (เช่น แก้ว) บนตัวเครื่องภายนอกอาคารเพื่อหลีกเลี่ยงไม่ให้น้ำหยดลงบนตัวเครื่อง น้ำที่หยดลงบนเครื่องอาจทำให้จำนวนภายในเครื่องชำรุด และก่อให้เกิดไฟฟ้าลัดวงจร

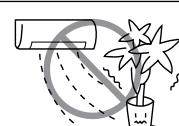


- ห้ามวางต้นไม้ไว้ใต้ทางลมโดยตรง เนื่องจากอาจเป็นอันตรายต่อต้นไม้ได้

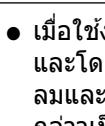

- เมื่อใช้งานเครื่องปรับอากาศโดยที่เปิดประตูและหน้าต่างทิ้งไว้ (ความชื้นภายในห้องจะสูงกว่า 80% ตลอดเวลา) และโดยที่แผ่นเบนทางลมคว่ำหน้าลง หรือเคลื่อนที่โดยอัตโนมัติเป็นระยะเวลานาน น้ำจะควบแน่นบนแผ่นเบนทางลมและหยดลงมาเป็นครั้งคราว ซึ่งจะทำให้เฟอร์นิเจอร์ของคุณเปียกชื้น ดังนั้น อย่าใช้งานเครื่องภายน้ำด้วยความร้อนในห้องเกินกว่าความสามารถในการทำความเย็นของเครื่อง (ตัวอย่างเช่น: มีคนอยู่ในห้องจำนวนมาก การใช้อุปกรณ์ทำความร้อน เป็นต้น) เครื่องปรับอากาศอาจไม่สามารถทำอุณหภูมิตามที่ตั้งค่าไว้ลงหน้าบาน
- หากปรีณาณ์ความร้อนในห้องเกินกว่าความสามารถในการทำความเย็นของเครื่อง (ตัวอย่างเช่น: มีคนอยู่ในห้องจำนวนมาก การใช้อุปกรณ์ทำความร้อน เป็นต้น) เครื่องปรับอากาศอาจไม่สามารถทำอุณหภูมิตามที่ตั้งค่าไว้ลงหน้าบาน
- เครื่องใช้ไฟฟ้านี้ไม่มีเจตนาให้ใช้โดยบุคคล (รวมถึงเด็ก) ที่ด้อยความสามารถทางร่างกาย ทางประสาทสัมผัสหรือจิตใจ หรือขาดประสิทธิภาพและความรู้ เว้นแต่ว่าจะได้รับการควบคุมดูแลหรือการสอนเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าโดยบุคคลที่รับผิดชอบต่อความปลอดภัยของบุคคลเหล่านั้น

ชื่อและฟังก์ชันของเต้ลະส່ວນ

ตัวเครื่องปรับอากาศ

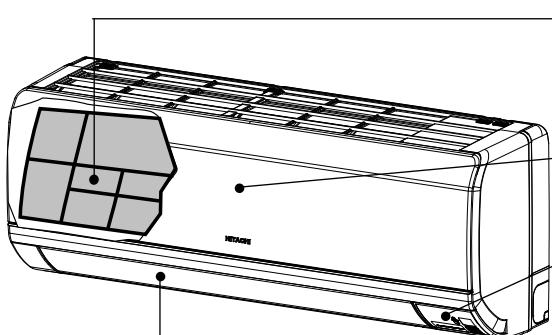


แผ่นกรองเบื้องต้น
เพื่อป้องกันฝุ่นละอองเข้าสู่ตัวเครื่องปรับอากาศ
(ดูหน้า 20)

แผงหน้ากากด้านหน้า

ไฟสัญญาณตัวเครื่องปรับอากาศ
ไฟสัญญาณแสดงสถานภาพการทำงาน
(ดูหน้า 16)

แผ่นเบนทางลมแนวอน • แผ่นเบนทางลมแนวตั้ง
(ช่องลมออก)

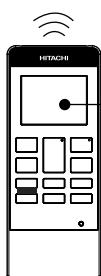


รีโมทคอนโทรล

ส่งสัญญาณการทำงานไปยังตัวเครื่องปรับอากาศ
เพื่อใช้งานฟังก์ชันทั้งหมดของเครื่อง

ตัวเครื่องภายนอกอาคาร

RAC-CH18PCAST

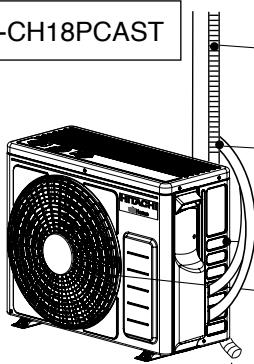


ห่อระบายน้ำ
น้ำที่ควบคุมแน่นจะระบายสู่ภายนอก

ห่อเชื้อมต่อและห่อฉนวนสำหรับระบบการวางท่อ

ช่องลมเข้า (ด้านหลัง, ด้านซ้าย)

ช่องลมออก

RAC-CH24PCAST

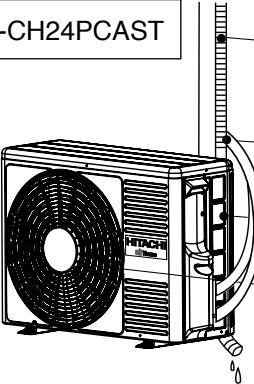

ห่อระบายน้ำ
น้ำที่ควบคุมแน่นจะระบายสู่ภายนอก

ห่อเชื้อมต่อและห่อฉนวนสำหรับระบบการวางท่อ

ช่องลมเข้า (ด้านหลัง, ด้านซ้าย)

ช่องลมออก

ชื่อรุ่นและขนาด

รุ่น	ความกว้าง (มม.)	ความสูง (มม.)	ความหนา (มม.)
RAK-CH18PCAST, RAK-CH24PCAST	900	300	230
RAC-CH18PCAST	658	530	275
RAC-CH24PCAST	750	570	288

ไฟสัญญาณบนตัวเครื่องปรับอากาศ

ไฟล้างແພງຄອຍເຢັນ

ไฟนີ້ຈະດິດເມື່ອຝຶກໜັງລັງແພງຄອຍລົ່ງເຢັນ (Frost Wash) ທ່ານ

ໄຟນີ້ຈະກະພຽບເພື່ອແນະນຳໃຫ້ເປີດໃຫ້ການລັງແພງ
ຄອຍລົ່ງເຢັນເອງໜັງຈາກເຄື່ອງປັບອາກາສມີການທ່ານ

ສະສົມຄຽນ 200 ຂົວໂມງ


ໂປຣດວັງອີງຈາກຄູ່ມື້ອົມໂຄນໂທຣລສໍາຮັບຮາຍ
ລະເວີດການທ່ານຂອງ Frost Wash.

ໄຟແສດງການທ່ານ

ໄຟນີ້ຈະດິດໃນຮ່ວມງໍທີ່ທ່ານ

ໄຟຕົ້ນຕັ້ງເວລາ

ໄຟນີ້ຈະດິດເມື່ອຕົ້ນຕັ້ງເວລາທ່ານ

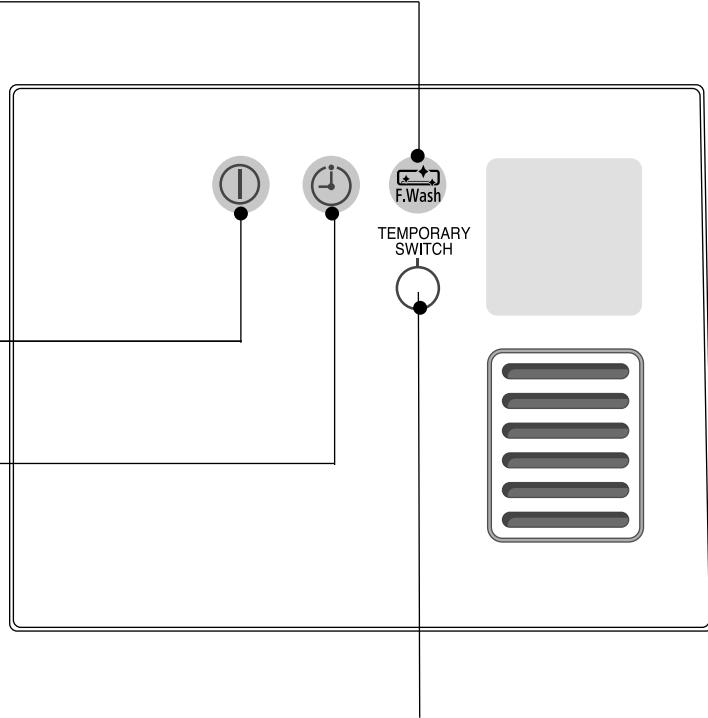

ປຸມສວິຕົງຊັ້ວຄຣາ

ສວິຕົງຊັ້ວຄຣາ

ໃຊ້ສວິຕົງນີ້ເພື່ອເຮີ່ມແລະຫຼຸດການທ່ານເມື່ອົມໂຄນໂທຣລໄຟທ່ານ


- ເມື່ອກົດສວິຕົງຊັ້ວຄຣາ ເຄື່ອງຈະທ່ານໃນໂທນດອັດໂນມັດ
- ເມື່ອເຄື່ອງທ່ານໂດຍໃຊ້ສວິຕົງຊັ້ວຄຣາຫລັງຈາກປິດແລ້ວເປີດແຫ່ງຈ່າຍໄຟອຶກຮັງ ເຄື່ອງຈະທ່ານໃນໂທນດອັດໂນມັດ

ชื่อและฟังก์ชันของตัวรีโมทคอนโทรล

รีโมทคอนโทรล

อุปกรณ์นี้จะควบคุมการทำงานของตัวเครื่องปรับอากาศ ระยะของสัญญาณถึงตัวเครื่องปรับอากาศประมาณ 7 เมตร หากมีการใช้งานไฟอินเวอร์เตอร์ ระยะของสัญญาณอาจไกลกว่านี้

อุปกรณ์นี้สามารถยึดติดกับผนังโดยใช้ตัวติดตั้งที่ให้มา ก่อนทำการติดตั้ง ตรวจสอบให้แน่ใจว่าตัวเครื่องปรับอากาศสามารถควบคุมได้จากรีโมทคอนโทรล

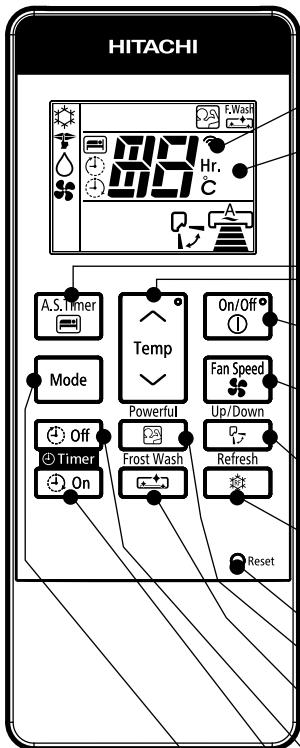

On/Off	เริ่ม / หยุด
Mode	ปุ่มเลือกโหมด
	โหมดทำความเย็น แบบเงียบ ลดความชื้น พัดลม
Fan Speed	ความเร็วของพัดลม
	อัตโนมัติ แบบเงียบ ต่ำ กลาง สูง
Powerful	ปุ่มการทำงานแบบเดี่ยว ประสิทธิภาพด้วยสัมผัสเดียว
Up/Down	สวิงอัตโนมัติ (แนะนำ)
	ตัวเลือกการตั้งเวลา ตัวตั้งเวลาปิด ตัวตั้งเวลาเปิด
A.S.Timer	ตัวตั้งเวลา AIR SLEEP
Frost Wash	ละลายน้ำแข็ง
Refresh	รีเฟรช

- สัญลักษณ์การส่งสัญญาณ
สัญลักษณ์การส่งสัญญาณจะกระพริบ เมื่อมีการส่งสัญญาณ
- หน้าจอ
หน้าจอจะแสดงอุณหภูมิห้องที่เลือก สถานะตัวตั้งเวลา พังก์ชัน และระดับความเร็วในการหมุนของพัดลมที่เลือก
- ปุ่มตัวตั้งเวลา AIR SLEEP
ใช้ปุ่มนี้เพื่อตั้งค่าโหมดตัวตั้งเวลา AIR SLEEP
- ปุ่มอุณหภูมิ
กดปุ่มนี้เพื่อเพิ่มหรือลดค่าอุณหภูมิ (กดค้างไว้และค่าจะเปลี่ยนเรื่อยๆ)
- ปุ่มเริ่ม / หยุด
กดปุ่มนี้เพื่อเริ่มหรือหยุดทำงาน
- ปุ่มตัวเลือกความเร็วพัดลม
ปุ่มนี้จะกำหนดความเร็วพัดลม ทุกครั้งที่คุณกดปุ่มนี้ ระดับความเร็วในการหมุนของพัดลมจะเปลี่ยนจาก (AUTO) → (HI) → (MED) → (LOW) → (SILENT).
- ปุ่มสวิงอัตโนมัติ (แนะนำ)
ควบคุมองศาของแผ่นเบนทางลมแนะนำ
- ปุ่มรีเฟรช
ใช้ปุ่มนี้เพื่อบรรบสภาวะในห้องให้สดชื่น
- ปุ่มรีเซ็ต
- ปุ่มการทำงานแบบเดี่ยว
ใช้ปุ่มนี้เพื่อให้การปรับอากาศที่รวดเร็วและสนิยามมากยิ่งขึ้น หรือเริ่มการทำงาน
- ปุ่มลังผงคอล์ยเย็น
ระหว่างที่อยู่ในโหมดปิด ให้กดปุ่มนี้เพื่อตั้งค่าการลังผงคอล์ยเย็น
- ปุ่มตัวตั้งเวลาปิด
เลือกเพื่อตั้งเวลาปิด
- ปุ่มตัวตั้งเวลาเปิด
เลือกเพื่อตั้งเวลาเปิด
- ปุ่มเลือกโหมด
ใช้ปุ่มนี้เพื่อเลือกโหมด ทุกครั้งที่คุณกดปุ่มนี้ การเลือกโหมดจะเปลี่ยนจาก (ทำความเย็น) → (เงียบ) → (ลดความชื้น) → (พัดลม). อย่างไรก็ตาม ระหว่างที่อยู่ในโหมดปิด โหมดเงียบจะถูกข้ามไป

ข้อควรระวังในการใช้

- อย่าวางรีโมทคอนโทรลในที่ต่อไปนี้
 - ที่ที่โดนแสงแดดโดยตรง
 - อยู่ใกล้กับเครื่องทำความร้อน
 - หยิบจับรีโมทคอนโทรลด้วยความระมัดระวัง อย่าทำหล่นและ摔ลงไม่ให้เปียกน้ำ
 - เมื่อตัวเครื่องภายนอกอาคารหยุดทำงาน เครื่องจะไม่รีสตาร์ตเป็นเวลาประมาณ 3 นาที (ยกเว้นคุณจะปิดสวิตช์แล้วเปิดใหม่ หรือกดปุ่กล็อกออกแล้วเสียบใหม่) ที่เป็นเช่นนี้เพื่อป้องกันตัวเครื่อง ไม่ได้เป็นการทำงานขัดข้องแต่ประการใด

วิธีการใช้งานที่ถูกต้อง

อุณหภูมิห้องที่เหมาะสม



คำเตือน

อุณหภูมิเย็นจัดนั้นไม่ดีต่อสุขภาพ และเสียพลังงานไฟฟ้าโดยใช้เหตุ

การระบายอากาศ




ข้อควรระวัง


อย่าปิดห้องเป็นเวลานาน ให้เปิดประตูและหน้าต่างเป็นครั้งคราวเพื่อให้อากาศถ่ายเทเข้ามาในห้อง

การใช้งานตัวตั้งเวลาอย่างมีประสิทธิภาพ

ในตอนกลางคืน โปรดใช้ "โหมดการทำงานของตัวตั้งเวลาเปิดปิด" หรือตัวตั้งเวลาอนหลับ" ในสอดคล้องกับเวลาตื่นนอนของคุณในตอนเช้า การดำเนินการดังกล่าวจะช่วยให้คุณผ่อนคลายไปกับอุณหภูมิห้องที่แสนสบาย โปรดใช้ตัวตั้งเวลาให้เป็นประโยชน์

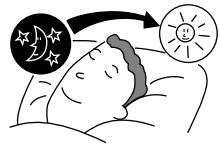

ติดตั้งผ้าม่านหรือม่านบังตา

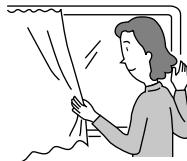

ผ้าม่านช่วยลดความร้อนที่ผ่านเข้ามาในห้องได้

อย่าลืมล้างแผ่นกรองเบื้องต้น



แผ่นกรองอากาศที่มีฝุ่นจับจะลดความแรงของลมและประสิทธิภาพการทำความเย็น เพื่อป้องกันไม่ให้สีเปลืองพลังงานไฟฟ้า โปรดทำความสะอาดแผ่นกรองทุกๆ 2 สัปดาห์

โปรดปรับอุณหภูมิให้เหมาะสม กับเด็กเล็กและเด็กโต




โปรดให้ความสำคัญกับอุณหภูมิห้องและทิศทางการไหลของอากาศเมื่อใช้งานเครื่องปรับอากาศสำหรับเด็กเล็ก เด็กโต และผู้สูงอายุที่เคลื่อนไหวไม่สะดวก

ข้อมูลสำหรับผู้ใช้

เครื่องปรับอากาศและแหล่งความร้อนภายในห้อง


ข้อควรระวัง

หากปริมาณความร้อนในห้องเกินกว่าความสามารถในการทำความเย็นของเครื่องปรับอากาศ (ตัวอย่างเช่น: มีคนอยู่ในห้องจำนวนมาก การใช้อุปกรณ์ทำความร้อน เป็นต้น) เครื่องปรับอากาศอาจไม่สามารถทำอุณหภูมิตามที่ตั้งค่าไว้ล่วงหน้า

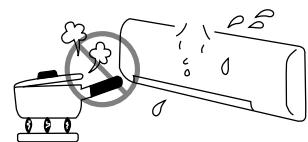

ไม่ได้ใช้งานเป็นเวลานาน


เมื่อไม่ได้ใช้งานเครื่องปรับอากาศเป็นเวลานาน โปรดปิดสวิตซ์จากแหล่งจ่ายไฟหลัก หากยัง "เปิด" แหล่งจ่ายไฟหลักอยู่ เครื่องปรับอากาศจะยังคงใช้ไฟฟ้าประมาณ 2.5 วัตต์ในวงจรควบคุมการทำงาน แม้ว่าเครื่องจะอยู่ในโหมด "ปิด" และก็ตาม

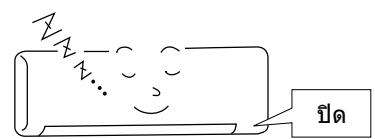

เมื่อเกิดไฟไหม้

คำเตือน

เพื่อป้องกันไม่ให้ตัวเครื่องเสียหายในระหว่างไฟไหม้ โปรดหยุดใช้งานตัวเครื่องและถอดปลั๊กออกจากเต้าเสียบ

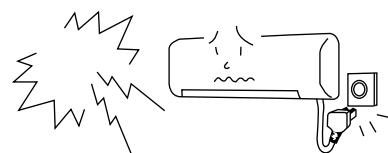

คลื่นรบกวนจากเครื่องใช้ไฟฟ้า

ข้อควรระวัง

เพื่อลดเสียงเสียงแทรกบกวน โปรดติดตั้งเครื่องปรับอากาศและวางรีโมทคอนโทรลให้ห่างจากเครื่องใช้ไฟฟ้าอย่างน้อย 1 เมตร




การใส่แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์

⚠ ข้อควรระวัง

ก่อนการทำความสะอาด ควรหยุดการทำงานของเครื่องและปิดสวิตช์แหล่งจ่ายไฟ


1 เปิดแผงด้านหน้า

- ยกแผงด้านหน้าขึ้นโดยการใช้ทั้งสองมือจับทั้งสองฝั่ง

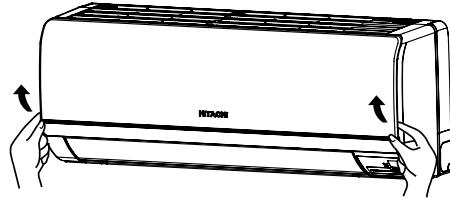

2 ถอดแผ่นกรองเบื้องต้นออก

- ดันขึ้นเพื่อปลดล็อก และดึงแผ่นกรองเบื้องต้นออกมา


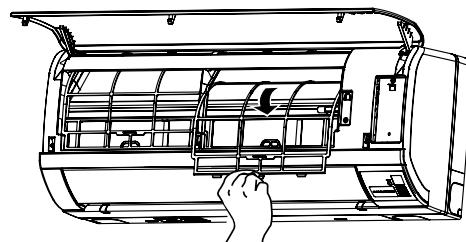


3 การใส่แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์

- ใส่แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ลงในกรอบ โดยค่อยๆ กดทั้งสองข้าง แล้วปล่อยหลังจากที่ใส่เข้าไป ในกรอบแผ่นกรองเบื้องต้นแล้ว พื้นผิวรังผึ้งจะอยู่ที่ด้านหน้าและพื้นผิวเรียบจะอยู่ด้านหลังเมื่อใส่ (เฉพาะสำหรับกรองที่บริสุทธิ์ด้วยพื้นผิวเรียบหนึ่ง)


พื้นผิวเรียบ (ด้านหลัง)

พื้นผิวรังผึ้ง (ด้านหน้า)

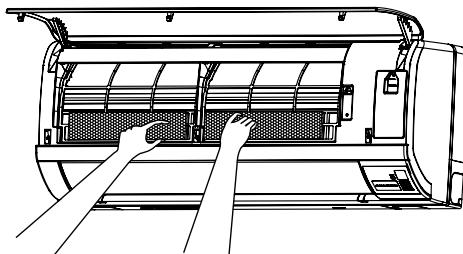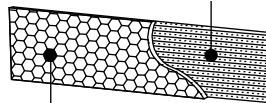


⚠ ข้อควรระวัง

อย่างอ่อนแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์เนื่องจากอาจทำให้โครงของแผ่นกรองชำรุดได้ โปรดอย่าสูดลมอากาศจากแผ่นกรองโดยตรง

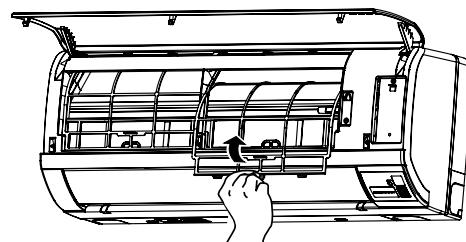


4 ใส่แผ่นกรองเบื้องต้น

- ใส่แผ่นกรองเบื้องต้นโดยตรวจสอบให้แน่ใจว่าหางยด้านที่เขียนว่า "FRONT" ขึ้น
- หลังจากใส่แผ่นกรองเบื้องต้นแล้ว ให้กดแผงหน้าหาก ด้านหน้าที่ตำแหน่งลูกศรทั้งสามส่วน ตามที่แสดงในภาพ และปิด แผงหน้าหากด้านหน้า

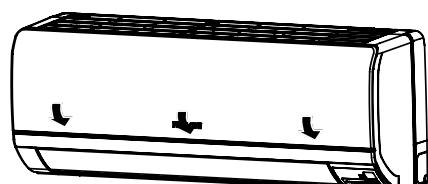

หมายเหตุ

- กรณีที่ถอดแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ โปรดทำความสะอาดขั้นตอนด้านบน
- ความสามารถในการทำความสะอาดเย็นจะลดลงเล็กน้อย และความเร็วในการทำความเย็นจะช้าลง เมื่อมีการใช้แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ ดังนั้น ให้ตั้งค่าความเร็วพัดลมไว้ที่ "HIGH" (สูง) ในกรณีที่ใช้แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์
- แผ่นฟอกอากาศไม่สามารถถอดล้างด้วยน้ำได้ ขอแนะนำให้ใช้เครื่องดูดฝุ่นเพื่อทำความสะอาดซึ่งอาจใช้งานได้ถึง 1 ปี รหัสอะไหล่สำหรับแผ่นฟอกอากาศนี้คือ <SPX-CFH22PM25>. โปรดใช้รหัสอะไหล่นี้สั่งซื้อเมื่อต้องการเปลี่ยนใหม่

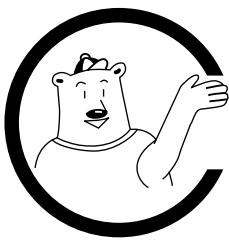

การบำรุงรักษา

⚠ ข้อควรระวัง

ก่อนการทำความสะอาด ควรหยุดการทำงานของเครื่องและปิดสวิตช์แหล่งจ่ายไฟ


1. แผ่นกรองเบื้องต้น

ทำความสะอาดแผ่นกรองเบื้องต้น เป็นอย่างดีจะช่วยลดฝุ่นภายในห้อง ในกรณีที่มีฝุ่นจำนวนมาก การทำความสะอาดแผ่นกรองเบื้องต้น การไหล์ของลมจะลดลง และประสิทธิภาพในการทำความสะอาดยังคงดีต่อไป นอกจากนี้ อาจเกิดเสียงดัง อย่าลืมทำความสะอาดแผ่นกรองเบื้องต้นโดยตามขั้นตอนด้านล่าง

ขั้นตอน


1

- เปิดแผงหน้าหากด้านหน้าและถอดแผ่นกรองเบื้องต้นออก
- ค่อยๆ ยกและถอดแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ จากกรอบแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์

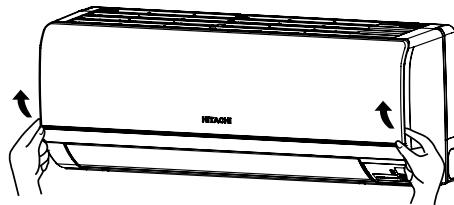


2

- ดูดฝุ่นจากเครื่องกรองเบื้องต้นและเครื่องกรองปรับอากาศ ใช้เครื่องดูดฝุ่นหากมีฝุ่นจำนวนมาก ล้างกรองเบื้องต้นด้วยน้ำที่เปิดไหลผ่านและค่อยๆ ถูด้วยแปรงขนนุ่ม แล้วปล่อยให้แห้ง

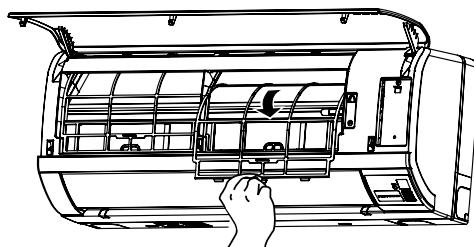

3

- ใส่แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์กลับเข้าไปในกรอบแผ่นกรองใหม่ หมายแผ่นกรองเบื้องต้นด้านที่มีคำว่า "FRONT" ขึ้น แล้วสอดเข้าไปยังตำแหน่งเดิม
- หลังจากใส่แผ่นกรองเบื้องต้นแล้ว ให้กดแผงหน้าหากด้านหน้าที่ตำแหน่งลูกศรทั้งสามส่วน ตามที่แสดงในภาพ และปิดแผงหน้าหากด้านหน้า

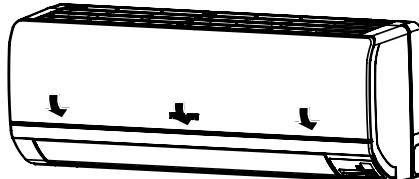

หมายเหตุ:

- ควรทำความสะอาดแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ทุกๆ เดือน หรือเร็วกว่านั้นหากพบว่าตัวเครื่องทำงานหนัก เมื่อใช้ติดต่อกันนานๆ อาจสูญเสียความสามารถในการดักกลิ่น เพื่อประสิทธิภาพสูงสุด ขอแนะนำให้ถอดเปลี่ยนทุกๆ 1 ปี ทั้งนี้ขึ้นอยู่กับความต้องการในการใช้งาน


⚠ ข้อควรระวัง

- อย่าใช้เครื่องปรับอากาศโดยไม่มีแผ่นกรองเบื้องต้น ฝุ่นละอองอาจเข้าสู่ตัวเครื่องปรับอากาศและทำให้เครื่องทำงานผิดพลาดได้


2. การทำความสะอาดแผงด้านหน้า

- ถอดแผงหน้าหากด้านหน้าออก และล้างด้วยน้ำสะอาด ล้างทำความสะอาดด้วยฟองน้ำนุ่มๆ หางจากใช้น้ำยาทำความสะอาดแบบเป็นกลางแล้ว ต้องล้างออกให้หมดด้วยน้ำสะอาด
- เมื่อไก่ถอดแผงหน้า ให้เช็ดด้วยผ้าแห้งนุ่มๆ เช็ดรีโนมทคอนโทรลให้ทั่วด้วยผ้าแห้งนุ่มๆ
- เช็ดหน้าออกให้ทั่ว หากมีน้ำหลงเหลืออยู่ที่ไฟล์สัญญาณหรือตัวรับสัญญาณของเครื่องปรับอากาศ อาจทำให้เกิดปัญหาได้

วิธีการถอดแผงหน้าหากด้านหน้าออก
อย่าลืมใช้ทั้งสองมือจับเพื่อถอดและใส่แผงหน้าหากด้านหน้า

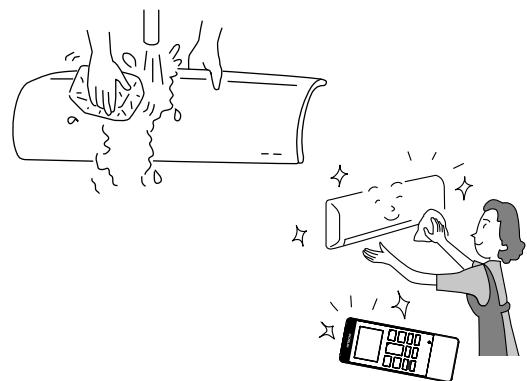


การถอดแผงหน้าหากด้านหน้าออก

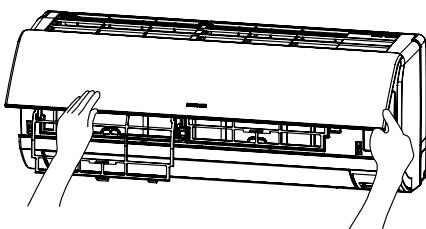

- เมื่อเปิดแผงหน้าหากด้านหน้าจนสุดด้วยสองมือแล้ว กดแขนยึดด้านขวาเข้าไปด้านในเพื่อปลดล็อก และขณะที่ค่อยๆ ปิดฝาลงมา ให้ดึงแผงหน้าหากด้านหน้าออกตามตรงๆ

การใส่แผงหน้าหากด้านหน้า

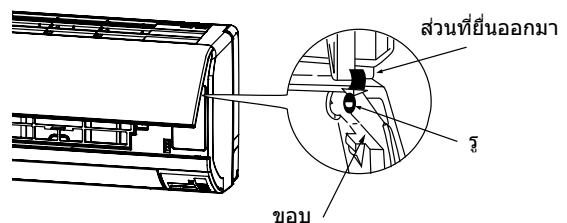

- ย้ายส่วนที่ยึดออกของแขนยึดด้านซ้ายและขวาไปยังขอบของตัวเครื่อง และใส่ลงในรูอย่างระมัดระวัง

⚠ ข้อควรระวัง

- ห้ามใช้น้ำร้อน (สูงกว่า 40 องศาเซลเซียส) เบนชิน น้ำมันเชื้อเพลิง กรดทินเนอร์ หรือแปรรูป เนื่องจากจะทำให้พื้นผิวพลาสติกและสารเคลือบชำรุดเสียหาย



การจัดเตรียมสายไฟ

⚠ ข้อควรระวัง

- โปรดใช้สายดิน ห้ามติดตั้งสายดินไว้ใกล้กับหัวน้ำหรือท่อแก๊ส สายล่อฟ้า หรือสายดินของโทรศัพท์ การติดตั้งสายดินที่ไม่เหมาะสมอาจทำให้เกิดไฟฟ้าช็อต
- ควรติดตั้งตัวตัวจาร์โดยใช้ขี้นอุ่นกับสถานที่ติดตั้งเครื่องปรับอากาศ หากไม่มีตัวตัวจาร์อาจเกิดอันตรายจากไฟฟ้าช็อตได้



ข้อสำคัญ

สายไฟในสายไฟน่าจะมีสีตามรหัสดังต่อไปนี้:

- | | |
|----------------|--------------|
| เขียวและเหลือง | : สายดิน |
| น้ำเงิน | : สายลับสูญ |
| น้ำตาล | : สายที่มีไฟ |

เนื่องจากสีของสายไฟในสายไฟน่าของเครื่องปรับอากาศอาจไม่ตรงกับเครื่องหมายสีที่ระบุขึ้นปลายสายไฟในปลั๊กของคุณ โปรดดำเนินการดังนี้:

สายที่มีสีเขียวและเหลืองต้องต่อเข้ากับขั้วปลายสายไฟในปลั๊กที่กำกับด้วยตัวอักษร E หรือสัญลักษณ์สายดิน หรือสีเขียวและเหลือง

สายที่มีสีน้ำเงินต้องต่อเข้ากับขั้วปลายสายไฟในปลั๊กที่กำกับด้วยตัวอักษร N หรือสัญลักษณ์สายลับสูญ หรือสีเขียวและเหลือง

สายที่มีสีน้ำตาลต้องต่อเข้ากับขั้วปลายสายไฟในปลั๊กที่กำกับด้วยตัวอักษร L หรือสัญลักษณ์สายที่มีไฟ หรือสีแดง

หมายเหตุ

หากสายไฟชำรุด ต้องเปลี่ยนเป็นสายไฟพิเศษที่ได้รับจากศูนย์บริการ/อะไหล่ที่ได้รับอนุญาตเท่านั้น

⚠ ข้อควรระวัง

ต้องทำความสะอาดและบำรุงรักษาเครื่องโดยผู้ให้บริการที่มีความเชี่ยวชาญเท่านั้น ก่อนการทำความสะอาดควรหยุดการทำงานของเครื่องและปิดสวิตช์แหล่งจ่ายไฟ

การตรวจสอบอย่างสม่ำเสมอ

โปรดตรวจสอบจุดต่างๆ ต่อไปนี้โดยผู้ให้บริการที่มีความเชี่ยวชาญทุกๆ ครึ่งปีหรือหนึ่งปี โปรดติดต่อตัวแทนจำหน่ายของคุณหรือศูนย์บริการ

1		สายดินหลุดหรือชำรุดหรือไม่
2		โครงของขาตั้งได้รับผลกระทบร้ายแรงจากสนิมหรือไม่ ตัวเครื่องภายนอกอาคารเสียงห้องหรือไม่มั่นคงหรือไม่
3		ปลั๊กไฟเสียบอยู่กับเตารับสนิทดีหรือไม่ (ระวังอย่าให้ปลั๊กหลวม)

หมายเหตุ

- ในการทำงานที่เงียบหรือหยุดการทำงานอาจเกิดเหตุการณ์ดังต่อไปนี้เป็นครั้งคราวแต่ไม่ถือเป็นการทำทำงานที่ผิดปกติ
 - (1) เสียงดังเล็กน้อยจากการไฟล์เรียนของสารทำความเย็นในระบบหมุนเวียนการทำความเย็น
 - (2) เสียงดังเล็กน้อยจากการเสียดสีของโครงพัดลมเมื่อได้รับความเย็นจนถึงระดับหนึ่งแล้วค่อยๆ อุ่นขึ้นเมื่อการทำงานหยุดลง
- อาจจะมีกลิ่นออกมายากเครื่องปรับอากาศภายในห้องเนื่องจากกลิ่นต่างๆ ที่ออกมายากครัว อาหาร เครื่องสำอาง และอีกมากมาย ไปติดกับเครื่อง จึงควรทำความสะอาดแผ่นกรองและตัวทาระ夷อย่างสม่ำเสมอเพื่อลดกลิ่น
- โปรดติดต่อตัวแทนจำหน่ายโดยทันที หากเครื่องปรับอากาศยังคงไม่สามารถทำงานได้โดยปกติหลังจากการตรวจสอบตามด้านบนแล้ว แจ้งรุ่นของเครื่องปรับอากาศ หมายเลขการผลิต วันที่ทำการติดตั้งแก่ตัวแทนจำหน่ายของคุณ โปรดแจ้งให้ตัวแทนทราบถึงปัญหาที่เกิดขึ้นด้วย
- ควรเชื่อมต่อแหล่งจ่ายไฟตามแรงดันไฟฟ้าที่กำหนด มิฉะนั้นเครื่องอาจชำรุดเสียหาย หรืออาจทำงานได้ไม่เต็มประสิทธิภาพตามที่ระบุ



บริการหลังการขายและการรับประกัน

เมื่อขอรับบริการ ให้ตรวจสอบจุดต่างๆ ต่อไปนี้

สภาพการทำงาน	ตรวจสอบจุดต่างๆ ต่อไปนี้
เมื่อเครื่องไม่ทำงาน	<ul style="list-style-type: none"> ไฟสีเข้มงานได้ปกติหรือไม่ แรงดันไฟฟ้าสูงมากหรือต่ำมากหรือไม่ ตัวตัวจร “เปิด” อยู่หรือไม่
เมื่อเครื่องทำความเย็นได้ไม่เต็มที่	<ul style="list-style-type: none"> ทำความสะอาดแผ่นกรองอากาศแล้วหรือไม่ แสงอาทิตย์ส่องถึงตัวเครื่องภายนอกอาคารโดยตรงหรือไม่ มีสิ่งกีดขวางการไฟล์ของลมของตัวเครื่องภายนอกอาคารหรือไม่ เปิดประตูหรือหน้าต่างไว้หรือไม่หรือมีแหล่งความร้อนภายในห้องหรือไม่ ตั้งค่าอุณหภูมิอย่างเหมาะสมหรือไม่

โปรดทราบ:

เมื่อเปิดสวิตช์เครื่อง โดยเฉพาะเมื่อไฟในห้องสแล้ว อาจมีการเปลี่ยนแปลงของความส่องเกิดขึ้นเล็กน้อย ซึ่งไม่ใช่เรื่องที่ต้องกังวล โปรดปฏิบัติตามเงื่อนไขของบริษัทจ่ายไฟฟ้าในห้องถีน

หมายเหตุ

- หลักเลี้ยงการใช้งานเครื่องปรับอากาศภายในห้องสำหรับการทำงานในโหมดทำความเย็นเมื่ออุณหภูมิภายนอกต่ำกว่า 21 องศาเซลเซียส (70 องศา Fahrneheit) อุณหภูมิสำหรับการใช้งานสูงสุดและต่ำสุดที่แนะนำทั้งด้านร้อนและเย็นควรเป็นไปตามด้านล่าง:

		ต่ำสุด	สูงสุด
ภายในห้อง	อุณหภูมิigrate; gerade; °C	21	32
	อุณหภูมิigrate; gerade; °C	15	23
นอกอาคาร	อุณหภูมิigrate; gerade; °C	21	46
	อุณหภูมิigrate; gerade; °C	15	26